




Table of content

- 1. DESCRIPTION OF CONTROL PANEL..... 2
- 2. THE LIQUID DOES NOT COME OUT..... 3
- 3. LIQUID FLOW IS VERY LOW 4
- 4. MACHINE DOES NOT HEAT 5
- 5. SAFETY THERMOSTAT RESET 6
- 6. Appendix: electrical diagram 7

1. DESCRIPTION OF CONTROL PANEL

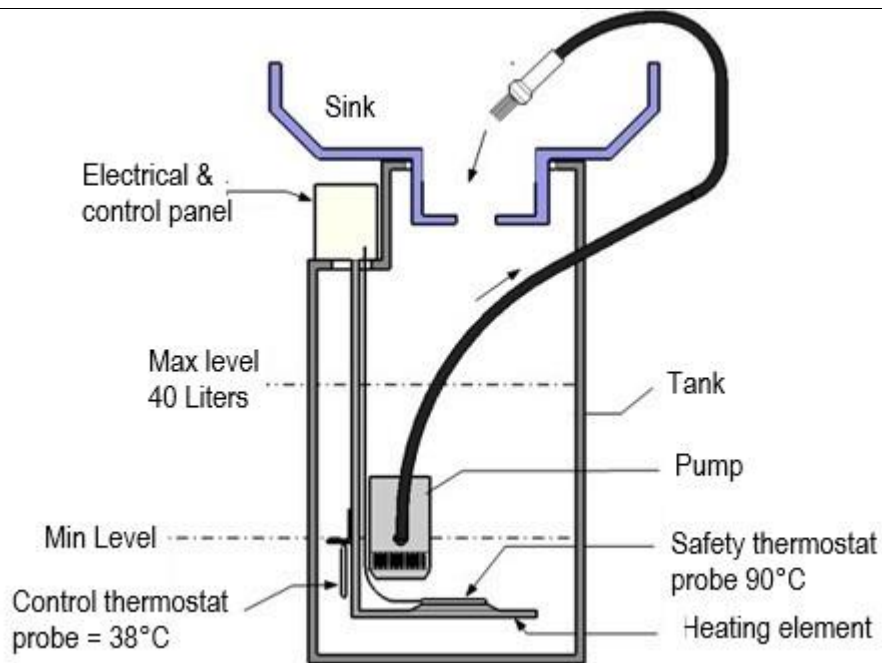

120VAC
Version



Power supply not connected
or
Safety thermostat tripped



Heater not switched on



Power on



Power supply not connected
or
Safety thermostat tripped



Heating Temperature range
Temperature 100.4 °F / 38°C (+/- 4°C)




Power on
Pump running
No flow = pump not primed




Heating Temperature range
Temperature < 100.4 °F / 38°C (+/- 4°C)


2. THE LIQUID DOES NOT FLOW

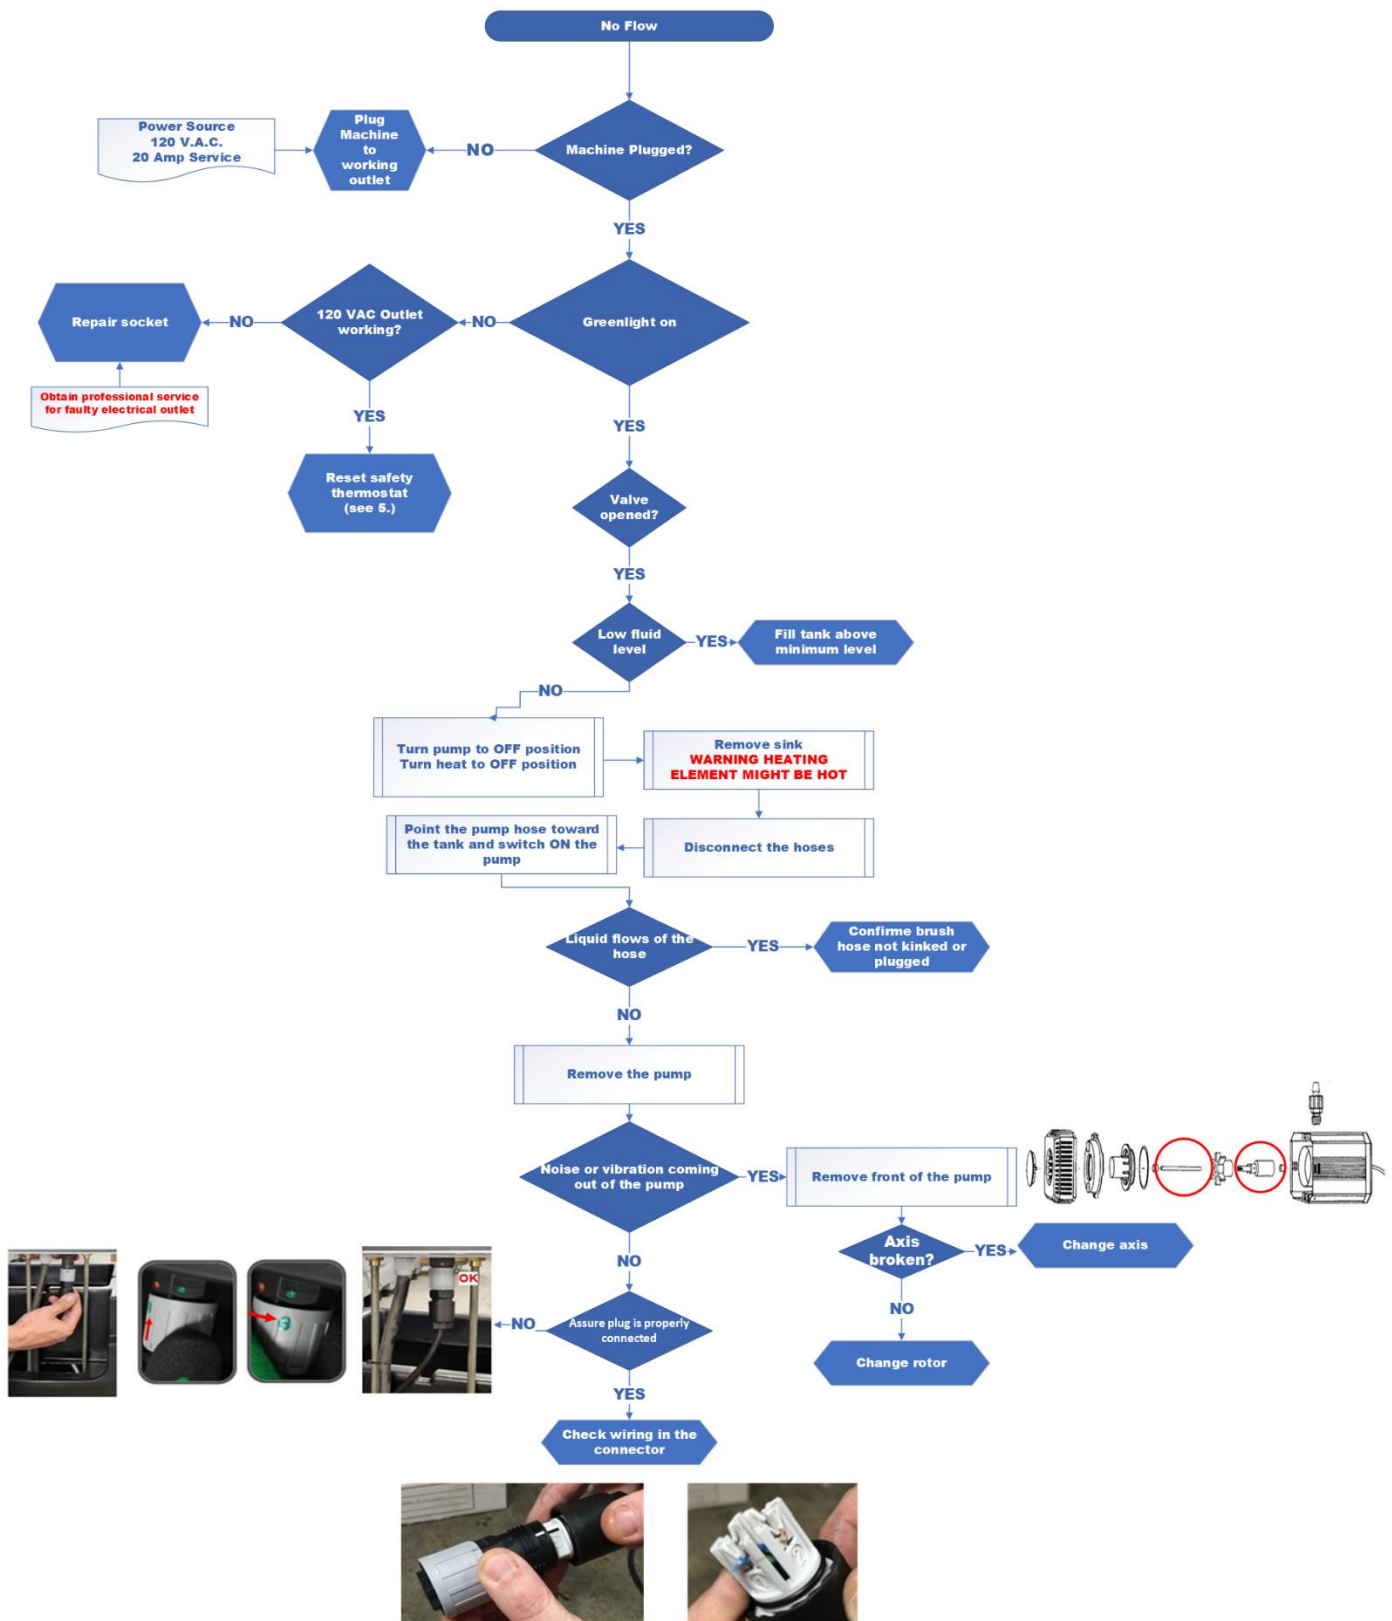


3. LOW LIQUID FLOW

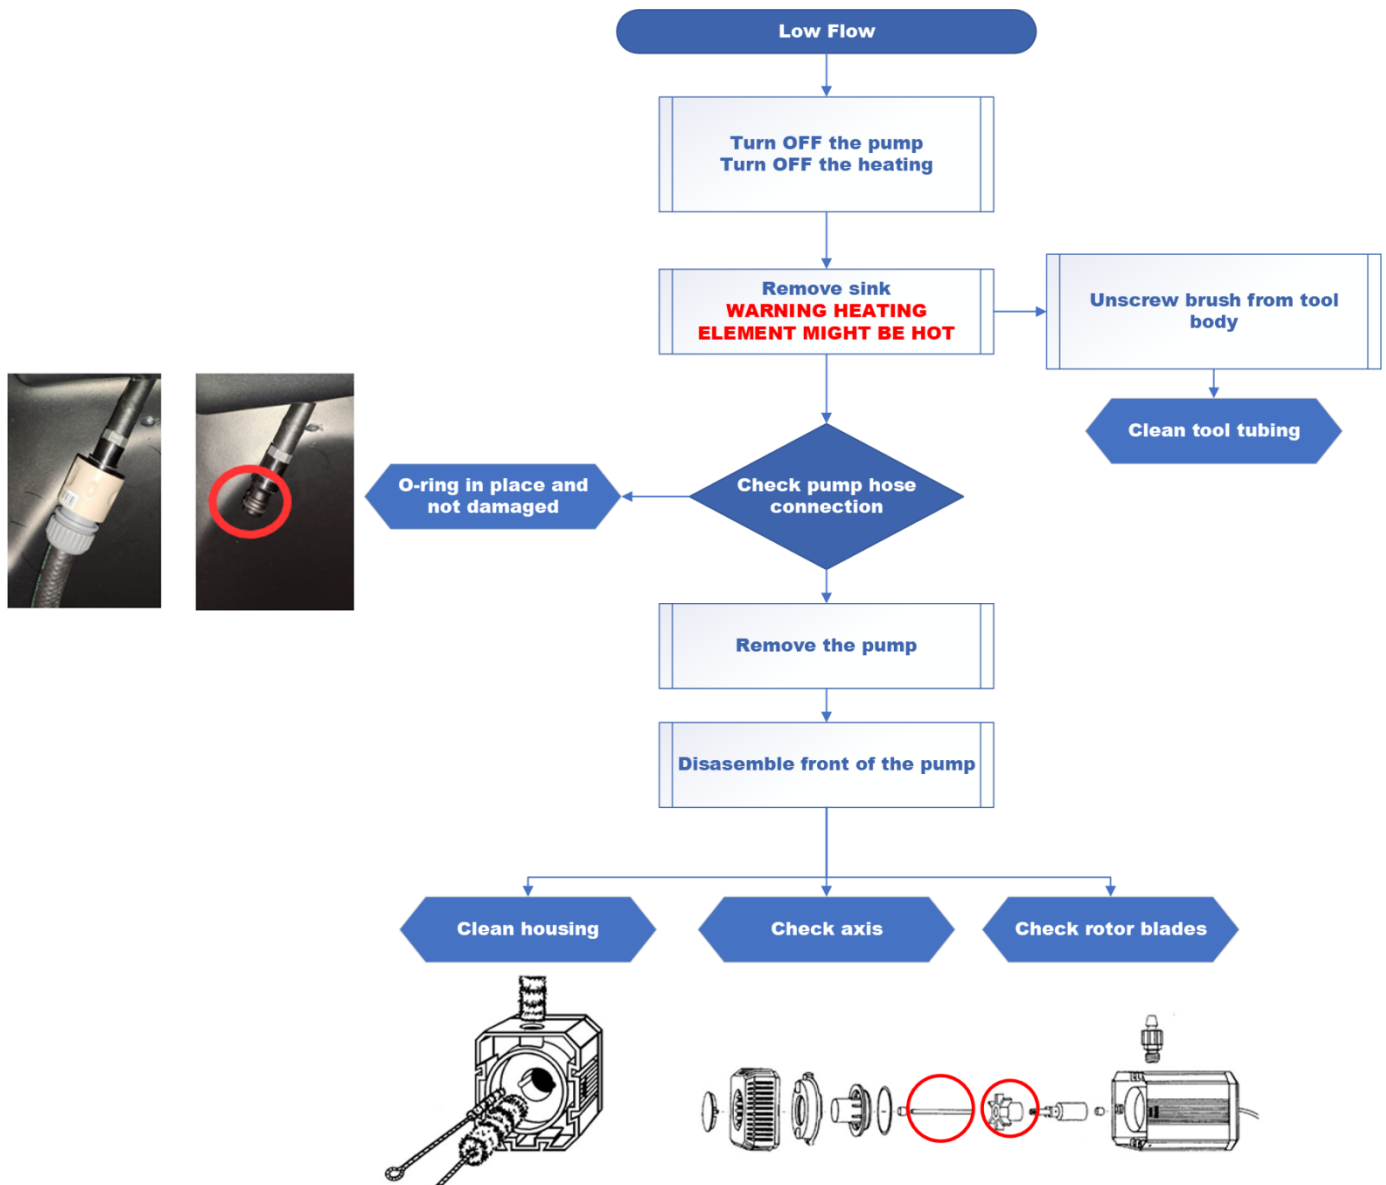



4. MACHINE DOES NOT HEAT

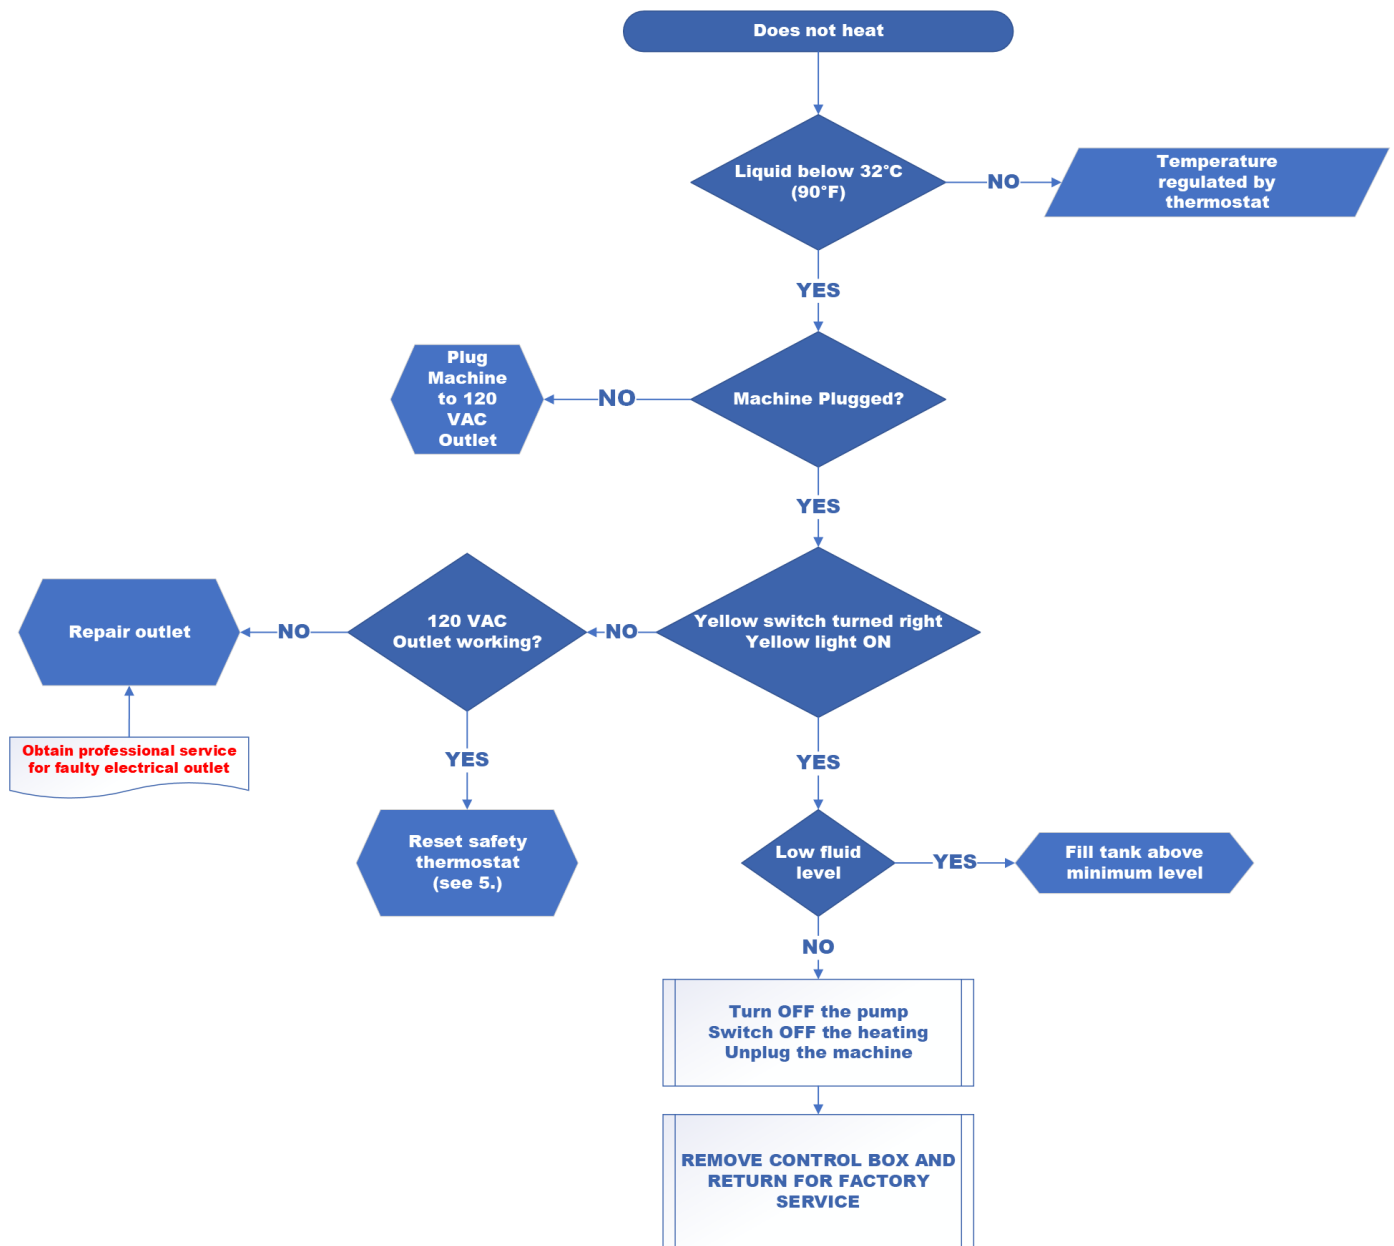

5. SAFETY THERMOSTAT RESET

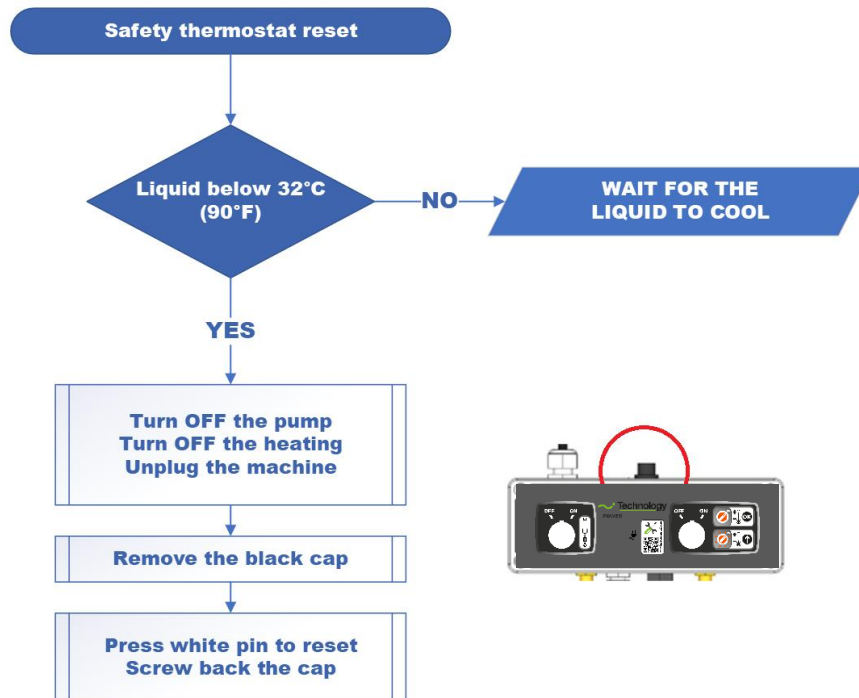

6. APPENDIX: ELECTRICAL DIAGRAM

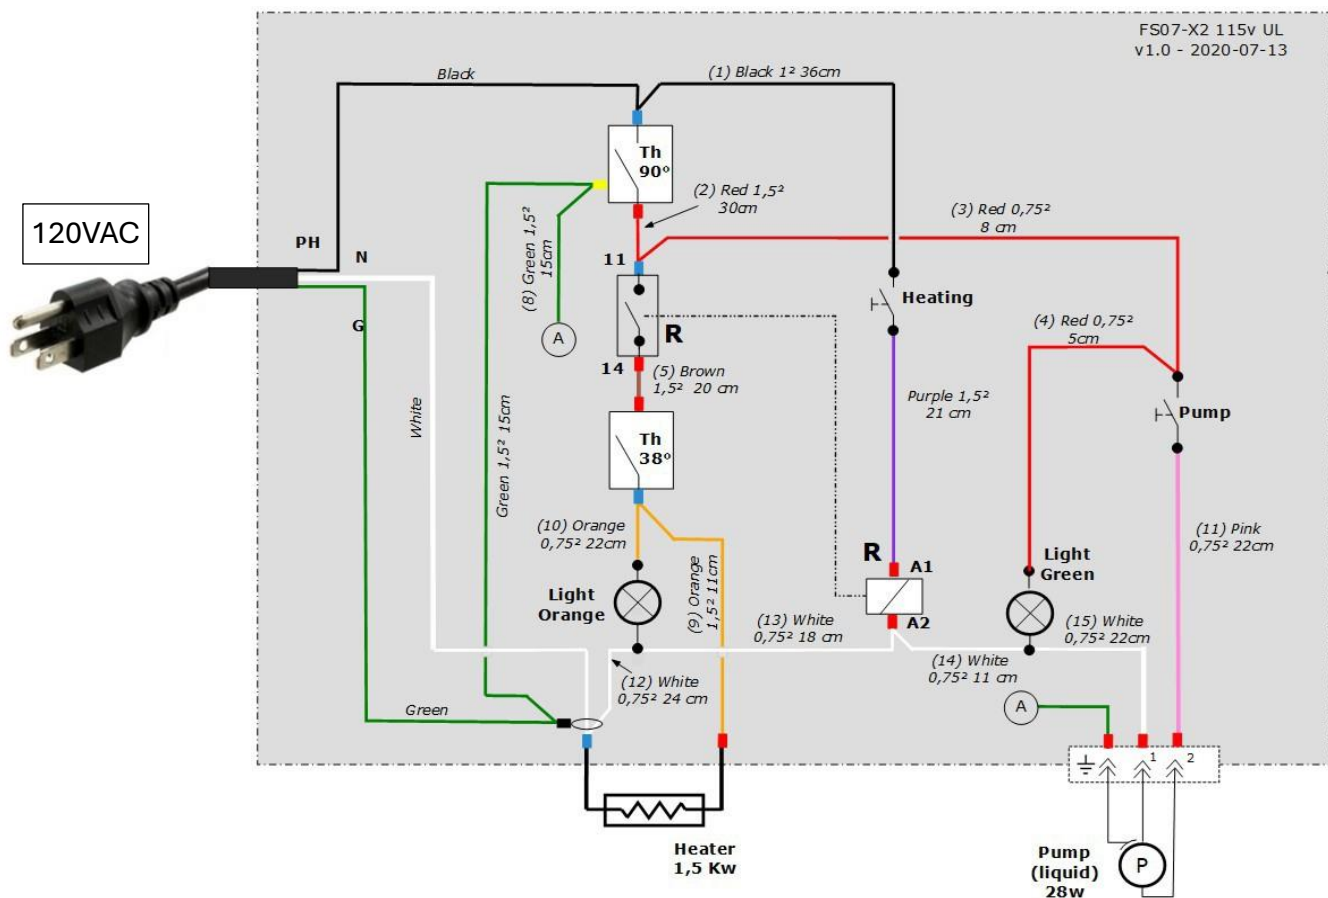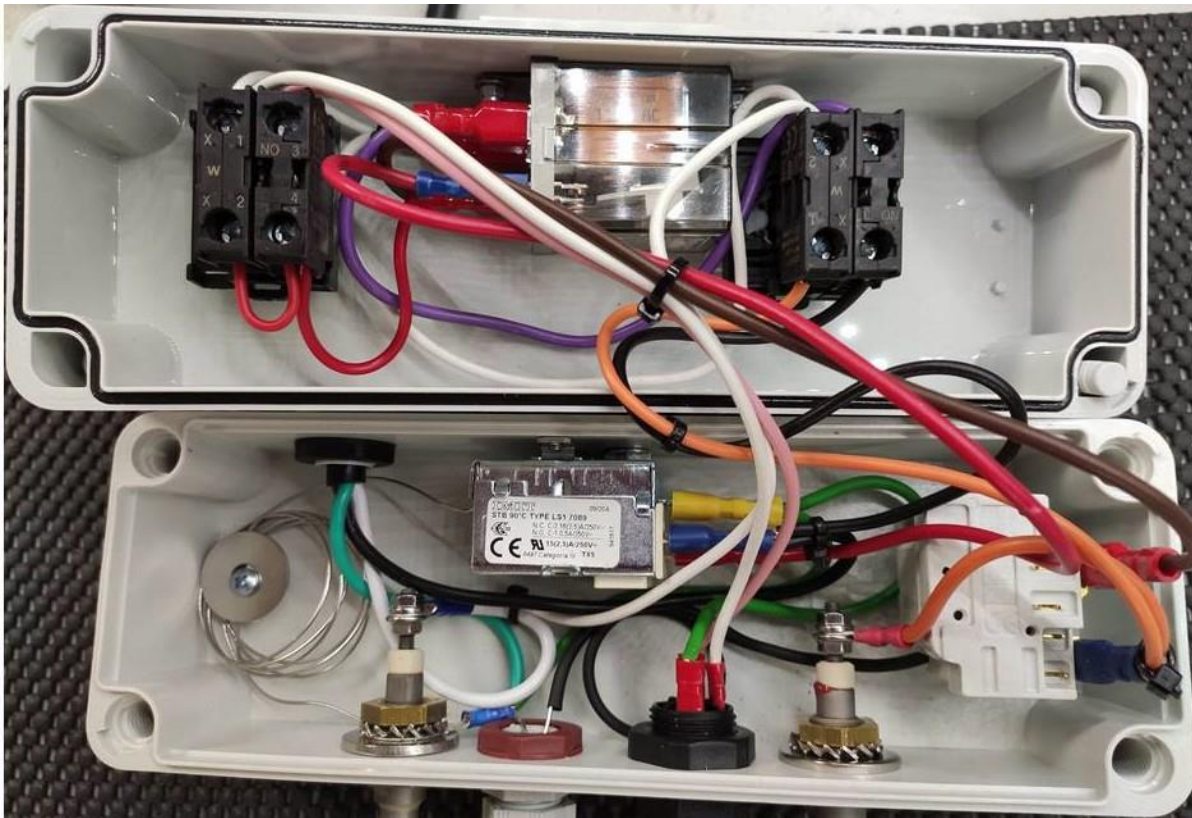

No	Picture	SRI SKU	Designation (EN)
01		CSEQFOC065-001	SOAKING TRAY PLATE
02		CSEQFO000711-1	PUMP FS01 / FS07 // 110V USA
04		CSEQFO000125	SOCKET FILTER 50 μ
05		CSEQFO000111-7	TOOL HOLDER FS01/07/09
06		CSEQFO000349	SOAKING TRAY STOPPER
08a		CSEQFO000102-4	FO SCREWABLE BRUSH - Hard Brush 0,5 mm
08b		CSEQFO000102-3	FO SCREWABLE BRUSH - Standard Brush 0,4 mm (OPTION)
10		CSEQFO000646	STRAINER FOR PUMP FS06/ FS07
13		CSEQFO000630	SWIVEL CASTOR
14		CSEQFO000631	BREAK SWIVEL CASTOR
16		CSEQFO000539	PLASTIC FASTENING CLIP
20		CSEQFO000055-13	ELECTRONIC KIT. GRAVITY X2 110V USA
21		CSEQFO000623	REGULATION THERMOSTAT 38°

22		CSEQFO000621	SAFETY THERMOSTAT 90°
23		CSEQFO000863	RESISTANCE FS07 (115V)
24		CSEQFO000854	2 POSITIONS ORANGE LIGHTING SWITCH